



FORD TRANSIT L3H2 2014 ONWARDS

PLY LINING KIT FITTING INSTRUCTIONS

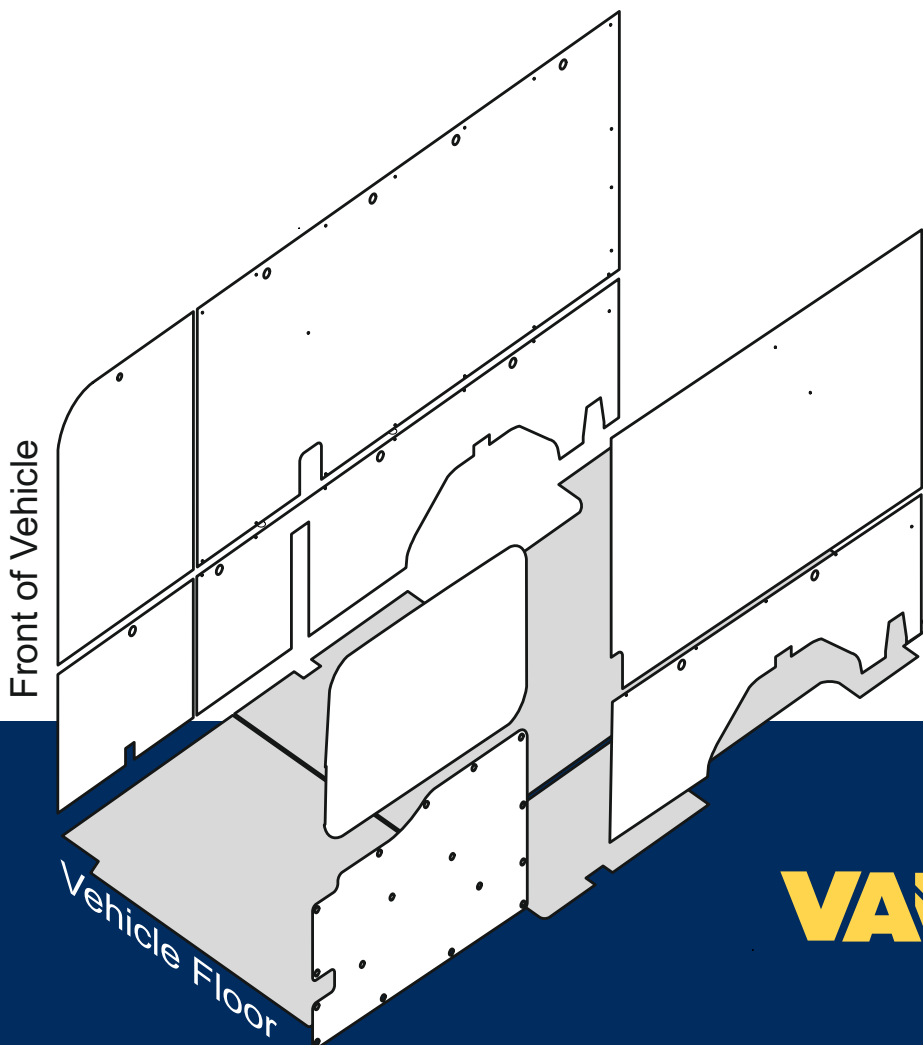

VANLINERS
THE VANLINERS.CO.UK

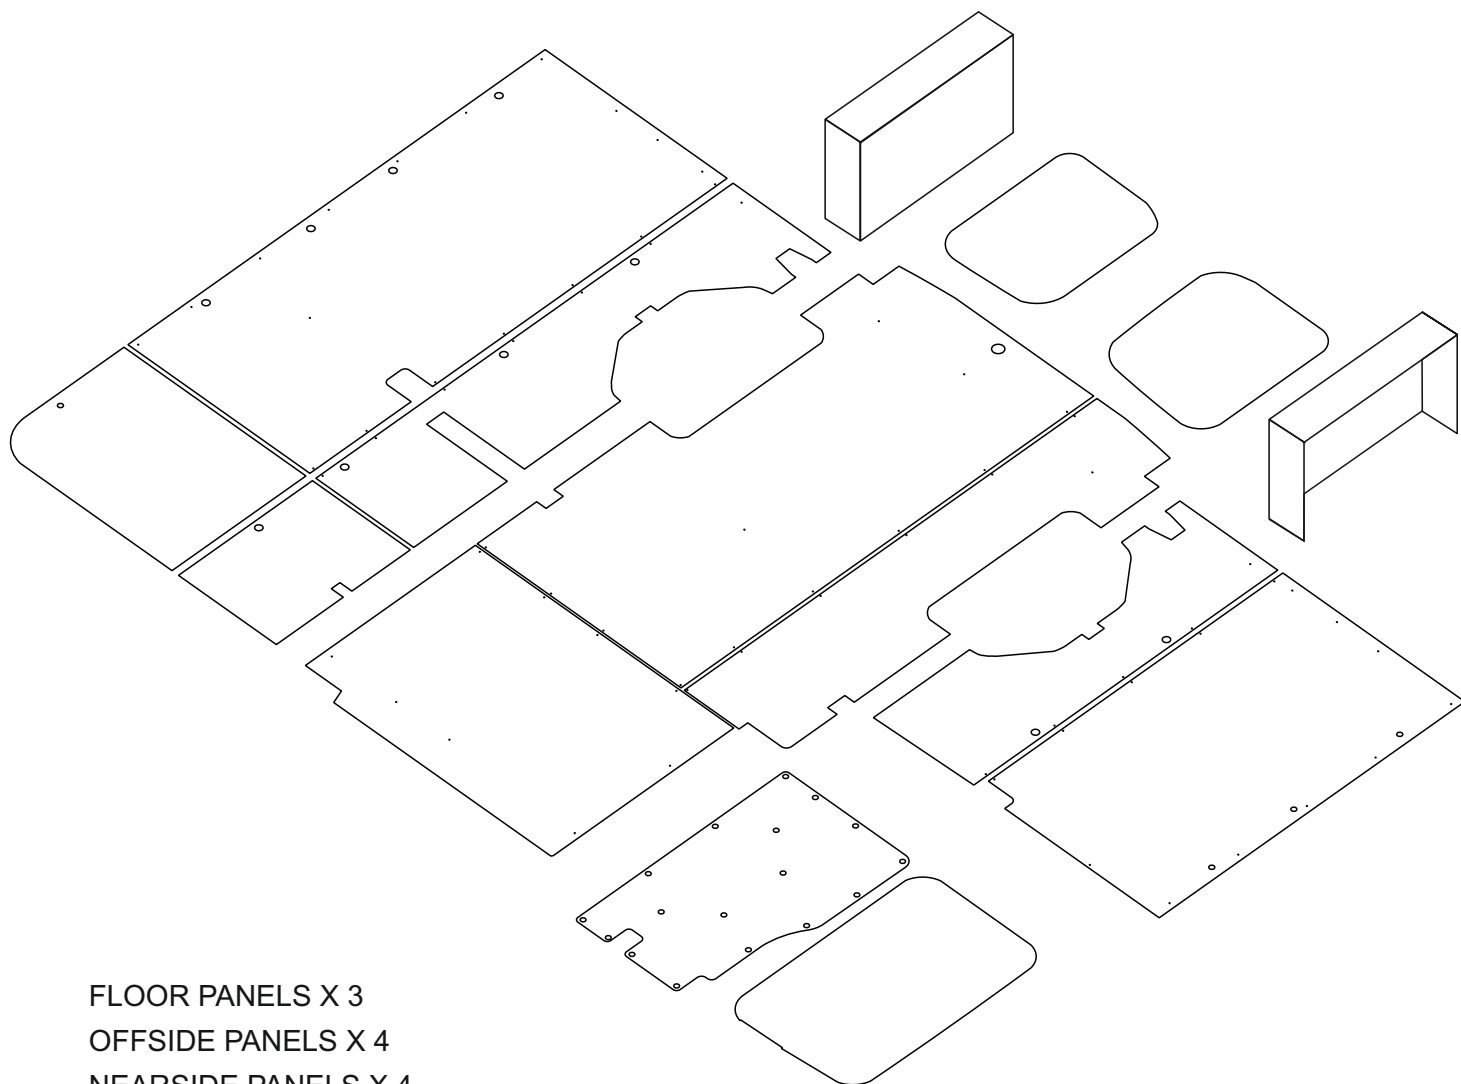


- FLOOR PANELS X 3
- OFFSIDE PANELS X 4
- NEAR SIDE PANELS X 4
- REAR DOOR PANELS X 2
- WHEEL BOXES X 2
- BAG OF FIXINGS X 1


TOOLS REQUIRED




CORDLESS DRILL

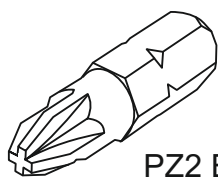


PZ2 BIT

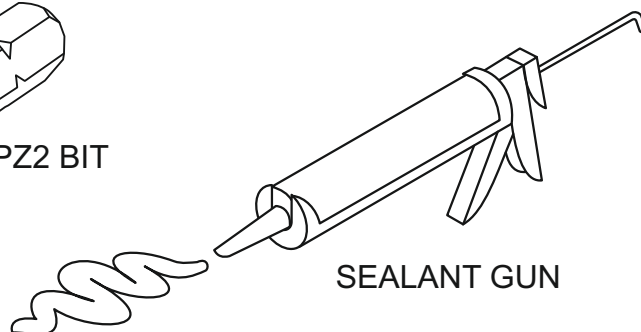


SEALANT GUN

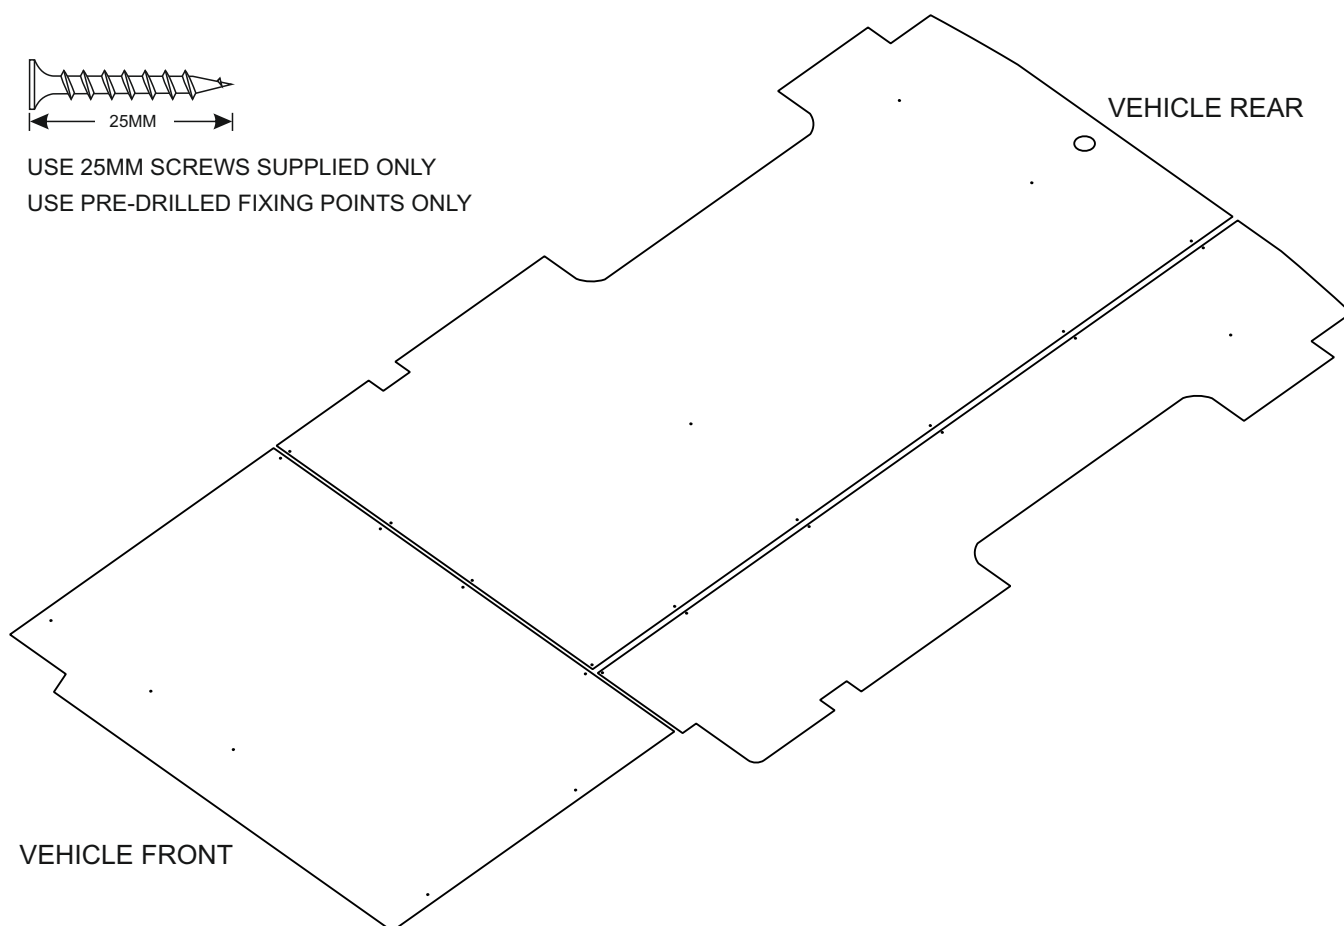

PLY LINING KIT OFFSIDE WALL INSTRUCTIONS

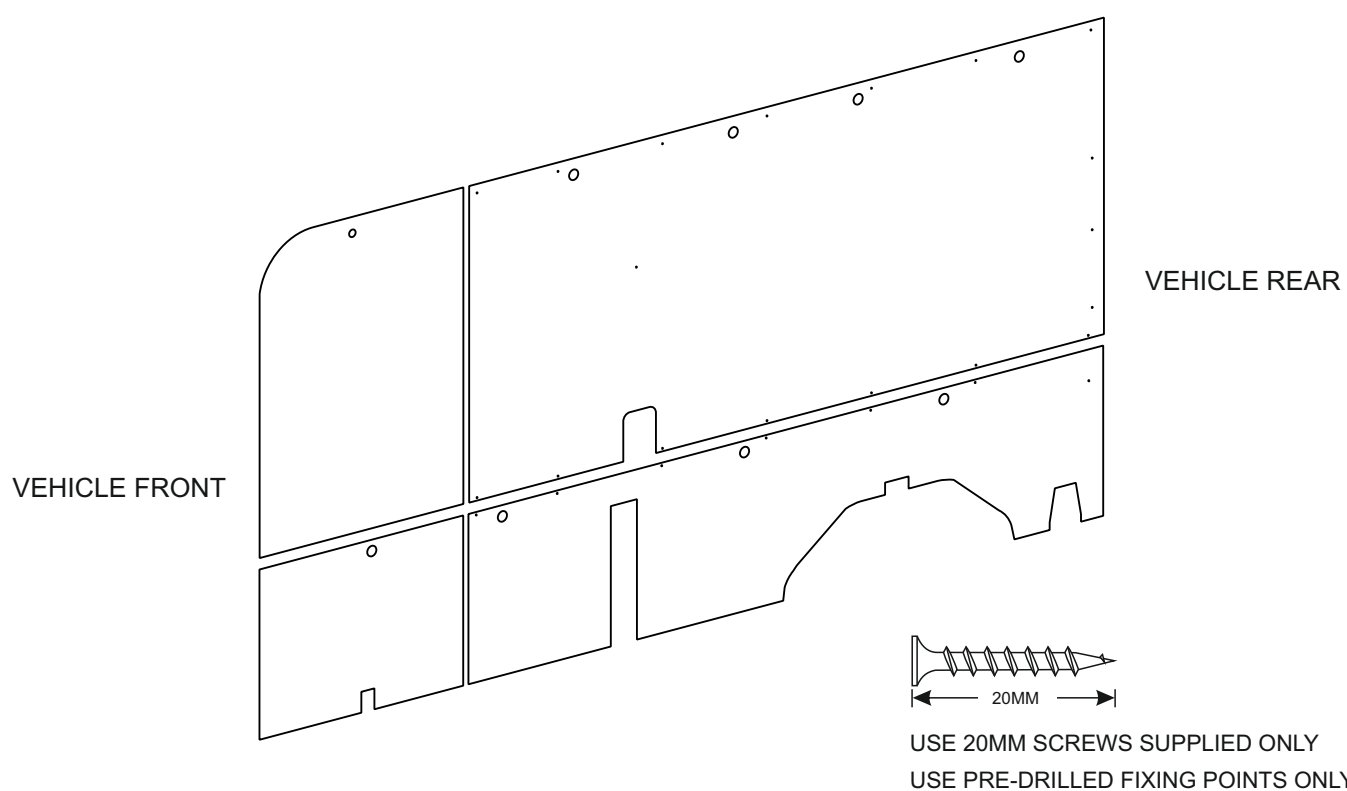

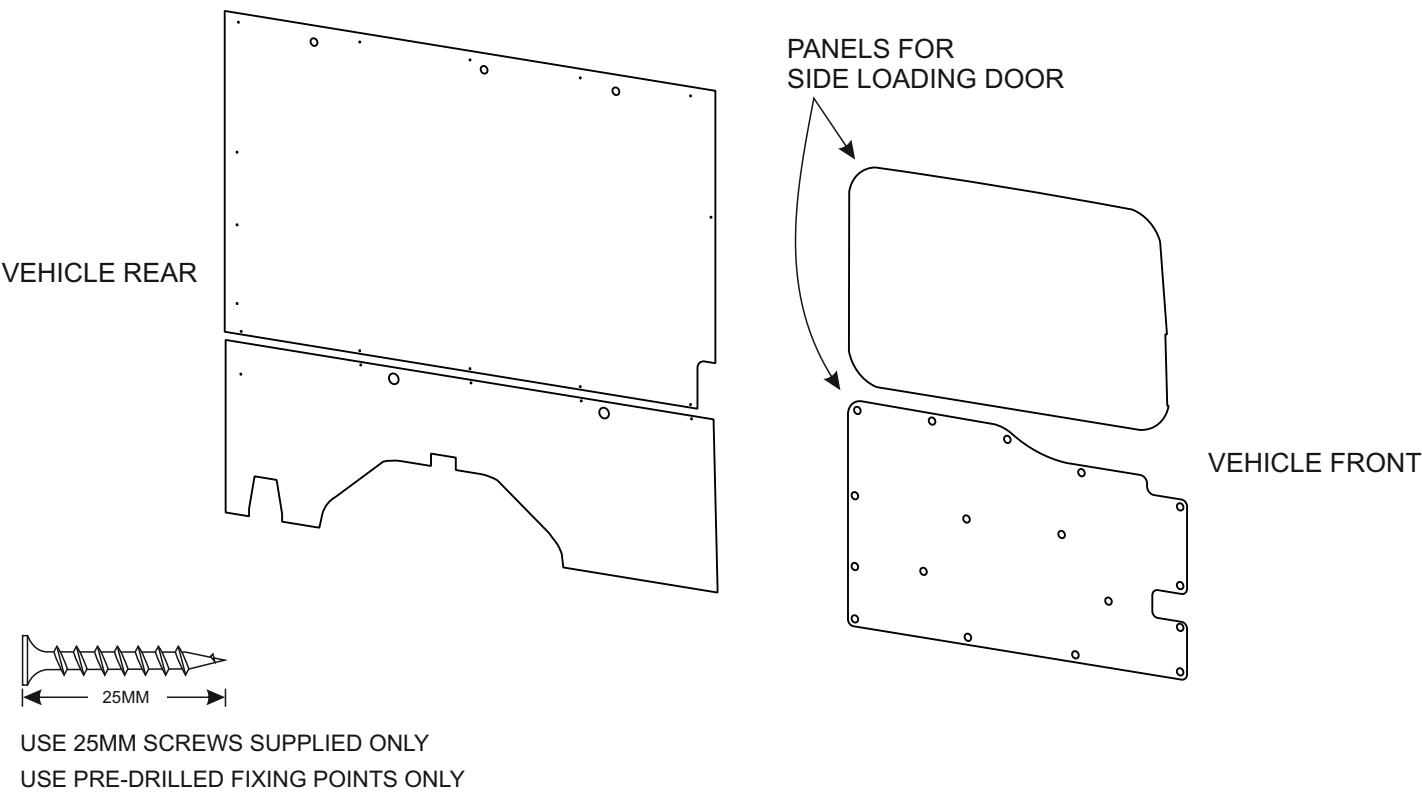

PLY LINING KIT REAR DOOR INSTRUCTIONS

